



HYDRANT USE PROCEDURES

1. ALL USERS MUST HAVE A VALID "HYDRANT METER USE AGREEMENT" FROM CROSS VALLEY WATER DISTRICT IN THEIR POSSESSION AND ON FILE. WATER FROM HYDRANTS WITHIN THE DISTRICTS CANNOT BE USED OUTSIDE THE DISTRICT BOUNDARIES.
2. NOTIFY THE DISTRICT AT (360) 668-6766, 2 BUSINESS DAYS BEFORE CONNECTION TO HYDRANT. DISTRICT STAFF SHALL INSTALL AND REMOVE THE METER TO ENSURE THE HYDRANT AND METER OPERATE PROPERLY ON CVWD APPROVED/DESIGNATED HYDRANTS.
3. ALL VEHICLES AND VESSELS ARE SUBJECT TO INSPECTION THE FIRST TIME THE HYDRANT METER IS USED AND ANYTIME THEREAFTER AT THE DISTRICT'S DISCRETION TO DETERMINE IF IT WILL REQUIRE HYDRANT USE TYPE A OR TYPE B.
4. THERE SHALL BE AN ACCEPTABLE WASHINGTON STATE APPROVED "BACKFLOW DEVICE" WHEN REQUIRED. THE BACKFLOW DEVICE MUST HAVE BEEN TESTED WITHIN THE PREVIOUS YEAR BY A CERTIFIED BACKFLOW TESTER. THE DISTRICT SHALL BE FURNISHED WITH A COPY OF THE TESTING REPORT.
5. THE REQUESTOR SHALL PROVIDE SUPPORT UNDER THE METER, BACKFLOW AND VALVE.
6. THE REQUESTOR SHALL NOT MOVE OR REMOVE THE HYDRANT METER OR OPERATE THE HYDRANT.
7. THE REQUESTOR IS RESPONSIBLE FOR ANY AND ALL DAMAGE'S TO THE HYDRANT AND/OR METER, INCLUDING PROVIDING PROTECTION FROM FREEZING AND/OR THEFT.
8. THE WATER USE SHALL BE CONTROLLED EXCLUSIVELY BY THE AUXILIARY VALVE. THE AUXILIARY VALVE SHALL BE OPERATED IN SLOW MANNER TO PREVENT UNDUE EXCESSIVE PRESSURE ON THE WATER SYSTEM.
9. ANY VIOLATION OF ANY OF THE ABOVE SHALL CONSTITUTE TERMINATION OF HYDRANT METER USE AGREEMENT AND USER TO BE SUBJECT TO A FINE, FUTURE RENTALS AND/OR FORFEIT OF DEPOSIT.
10. IF UNABLE TO OPERATE OR CLOSE THE AUXILIARY VALVE PROPERLY, CALL THE DISTRICT IMMEDIATELY FOR ASSISTANCE AT (360) 668-6766
11. SEE CVWD CODE SECTION 6.30 FOR MORE INFORMATION.

