


NOTE:

IF CLEANOUT IS INSTALLED UNDER DRIVEWAY OR WALK, IT MUST HAVE SOLID FRAME AND BOLT DOWN LID.

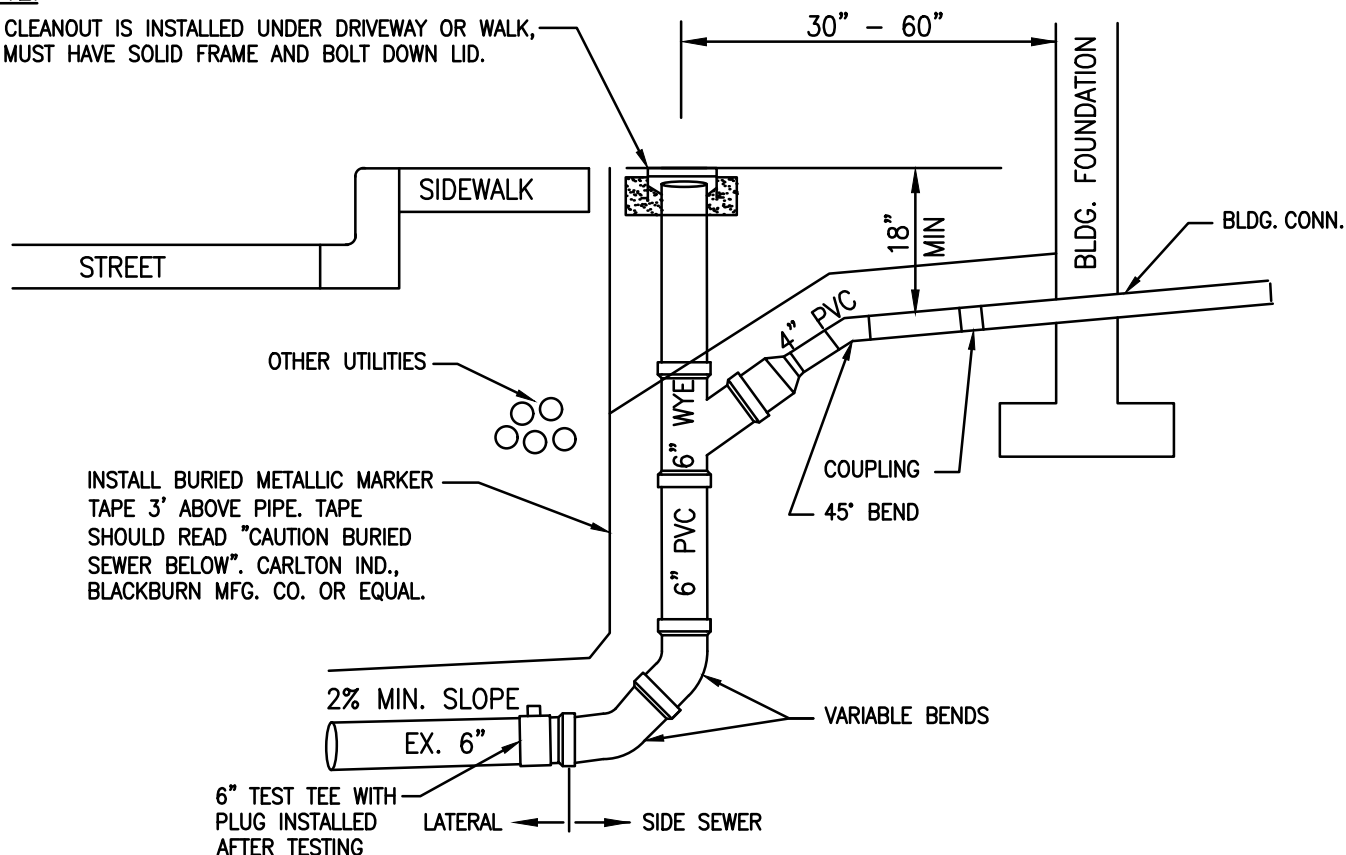

NOTES:

THIS METHOD MAY ONLY BE USED WITH PRIOR APPROVAL FROM THE DISTRICT AND ONLY WHEN STANDARD SIDE SEWER INSTALLATION PER DWG SS-1, OR SS-2 ARE NOT POSSIBLE BY EITHER:

1. CUTTING THE SIDE SEWER STUB BACK, ENABLING THE PIPE TO BE INSTALLED AT 100%, (45°, 1:1), OR LESS SLOPE (2% MIN) TO THE BLDG. CONNECTION LOCATED 30" FROM FOUNDATION AT MINIMUM OF 18" DEEP.
- OR—
2. ROUTING THE SIDE SEWER PIPE TO EXTEND ALONG THE SIDE OF THE BUILDING TO DECREASE SLOPE.

**CROSS VALLEY WATER DISTRICT
SIDE SEWER DETAILS**

**ALTERNATE SIDE SEWER
INSTALLATION**

SS-3

NOT TO SCALE

FEB 2022