


1' EXCESS LOCATE WIRE ABOVE LID,  
TO BE ROLLED UP NEATLY

PROVIDE HOLE INTO VALVE BOX.  
FASTEN IN TRACER WIRE WITH EPOXY.

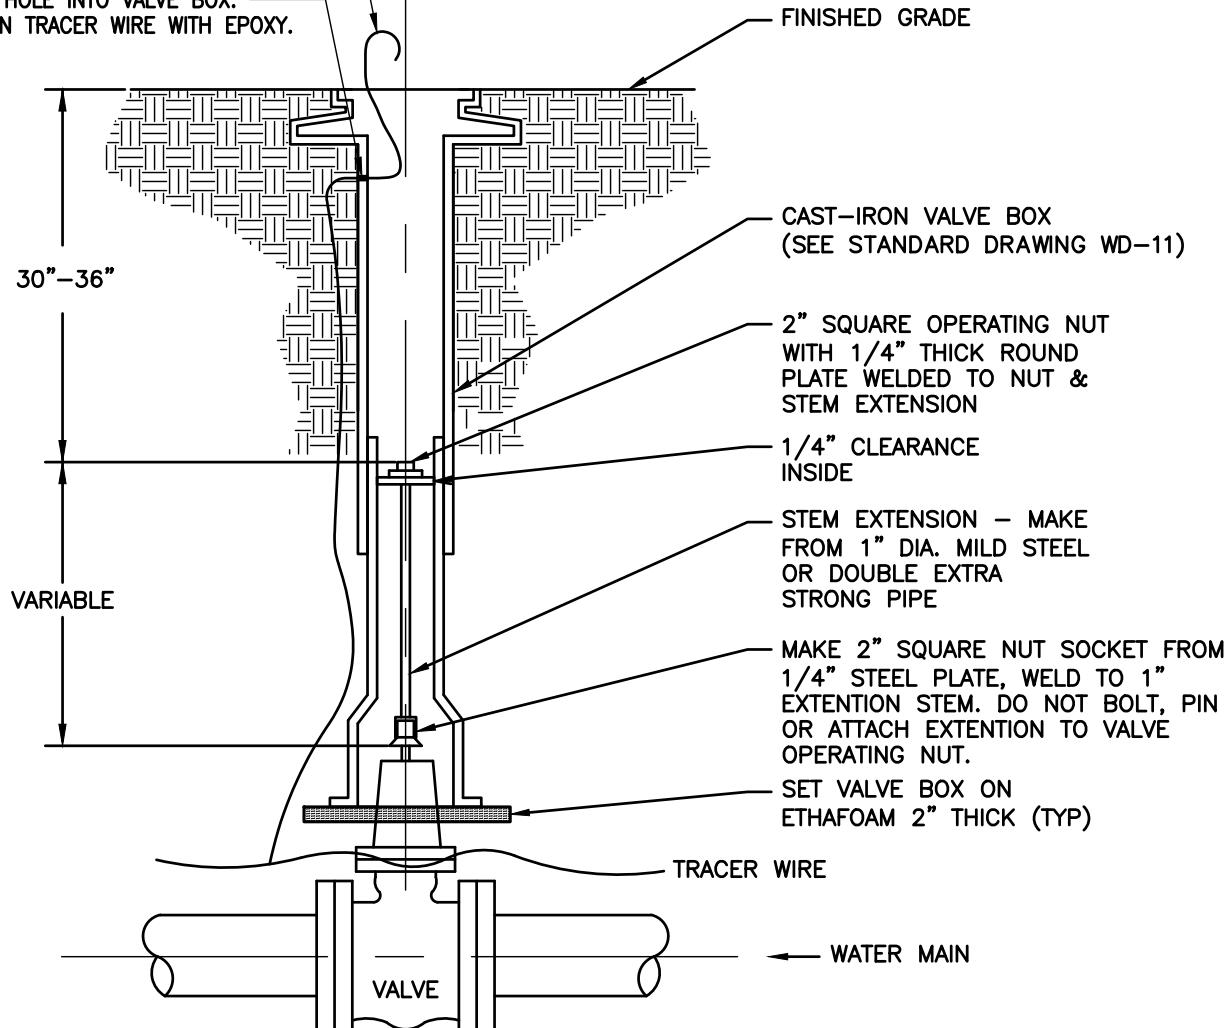

NOTE:

1. MINIMUM LENGTH OF EXTENSION IS 1 FOOT.